



Head Rod Clamp



Hinge for Arm



24" & 30" Projection

Spear Awning

*Installation
&
Product Guide*



**Bolt Arm
Through Hinge
* Arm Placement
can be adjusted
as preferred.**



**Head Rod Clamp
Clamp over Fabric and
tighten wing-nut.**



**Slip Ring Pulley
over hook on head
rod clamp.**

1111 S Talbot St.
St. Michaels, MD 21663
800-933-6936
Fax 410-745-2920
www.pycawnings.com

*Wrought Iron Front bars & Fiberglass Headrods are cut in 2 pieces for shipping if over 90" Wide. Connect with screws/coupling to make one length.

Installation Instructions

1. Mount first 2 outside Headrod clamps, at the desired position above the window, 7 inches in from each side of awning width. Mount any additional Headrod clamps, spaced evenly across width of awning.

- Mount level with window.

Headrod Clamps must be mounted to wall studs, window header or framing structure as they support the entire weight of the awning.

2. Slip the ring pulleys on the inside hook of each Headrod clamp.
3. Distance from screw hole on Headrod clamp down wall to hinge screw hole is;

27" for 24" Projection

33" for 30" Projection

*** Location of arms can be adjusted as preferred.**

Distance between hinges should same as awning width.

4. Slide Headrod in Headrod pocket of awning. Loosen wingnuts on Headrod clamp. Clamp Headrod (inside of fabric pocket) into Headrod clamp. Tighten the wingnuts over the fabric.

5. Slip the front bar through pocket on awning.
6. Connect projection bars to the front bar and wall hinge.
7. Mount cleat where desired.

Stringing Instructions

Mount cleat on the left or right side. Tie rope around front bar at pocket opening (closest to cleat) using a slip knot. Run rope up through ring pulley and down to cleat. Cut to desired length to wrap around cleat.

Repeat tying the knot around the front bar at the next pocket opening, run rope up through ring pulley and then across the top of awning through each ring pulley and down to cleat. Cut rope to desired length.

