

Installing Headrod Clamps:

1. Headrod clamps should be installed about 8" to 12" in from each side of the curtain at the desired height of the top of the curtain. The bottom of the roller curtain should not touch the floor when lowered.
2. Any headrod or pipe over 90" will be cut into two pieces for shipping purposes. Use the couplings provided to attach each piece of the headrod together, and the pipe.

Installing Headrod & Galvanized Pipe:

4. The fiberglass headrod goes through the smaller pocket (top of curtain), and the galvanized pipe goes through the larger pocket (bottom of curtain). \*Galvanized pipe can be slid in bottom pocket last to keep the weight off the curtain as you string the ropes.
5. With fiberglass headrod in pocket, clamp onto headrod clamps. Tighten wingnuts.

Installing Cleat:

6. Install cleat at desired position. on left or right side of Roller Curtain.




Porch Protection Curtains Up To 6' Wide

Stringing Diagram

Ropes tie to hole in headrod clamp, then drops behind curtain. Pull rope up in front of curtain under galvanized pipe, then put rope through pulley directly above. Then string rope through each pulley across the top, pull rope down to cleat, then cut rope. Repeat for each headrod clamp.

Ropes going through pulleys are in front of the curtain.

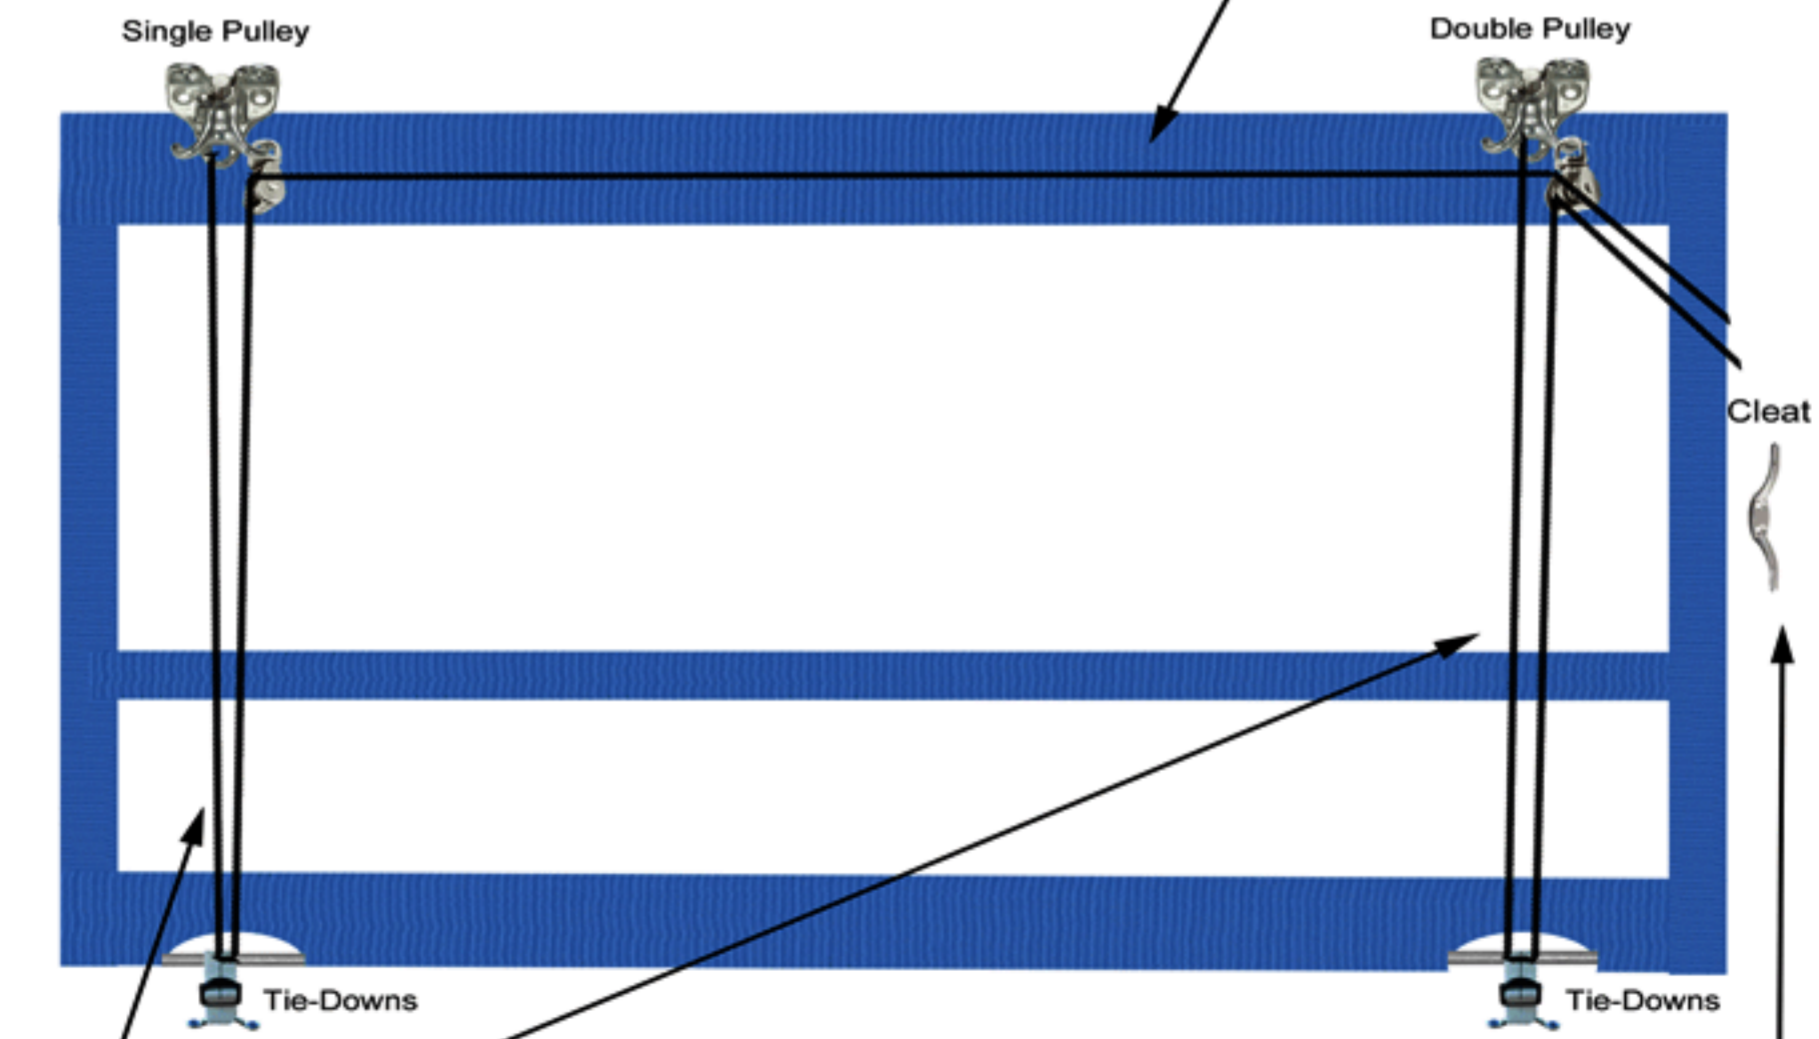

The rope tied to each headrod clamp is behind the curtain.

Reverse pulley layout for cleat on opposite side of curtain.

You will have 2 ropes going to cleat. Adjust so curtain pulls up evenly then tie ropes together.

Installing Headrod Clamps:

1. Headrod clamps should be installed about 8" to 12" in from each side of the curtain at the desired height of the top of the curtain. The bottom of the roller curtain should not touch the floor when lowered.
2. Any headrod or pipe over 90" will be cut into two pieces for shipping purposes. Use the couplings provided to attach each piece of the headrod together, and the pipe.

Installing Headrod & Galvanized Pipe:

4. The fiberglass headrod goes through the smaller pocket (top of curtain), and the galvanized pipe goes through the larger pocket (bottom of curtain). \*Galvanized pipe can be slid in bottom pocket last to keep the weight off the curtain as you string the ropes.

5. With fiberglass headrod in pocket, clamp onto headrod clamps. Tighten wingnuts.

Installing Cleat:

6. Install cleat at desired position. on left or right side of Roller Curtain.




Porch Protection Curtains 6' - 8' 11" Wide

Stringing Diagram

Ropes tie to hole in headrod clamp, then drops behind curtain. Pull rope up in front of curtain under galvanized pipe, then put rope through pulley directly above. Then string rope through each pulley across the top, pull rope down to cleat, then cut rope. Repeat for each headrod clamp.

Ropes going through pulleys are in front of the curtain.

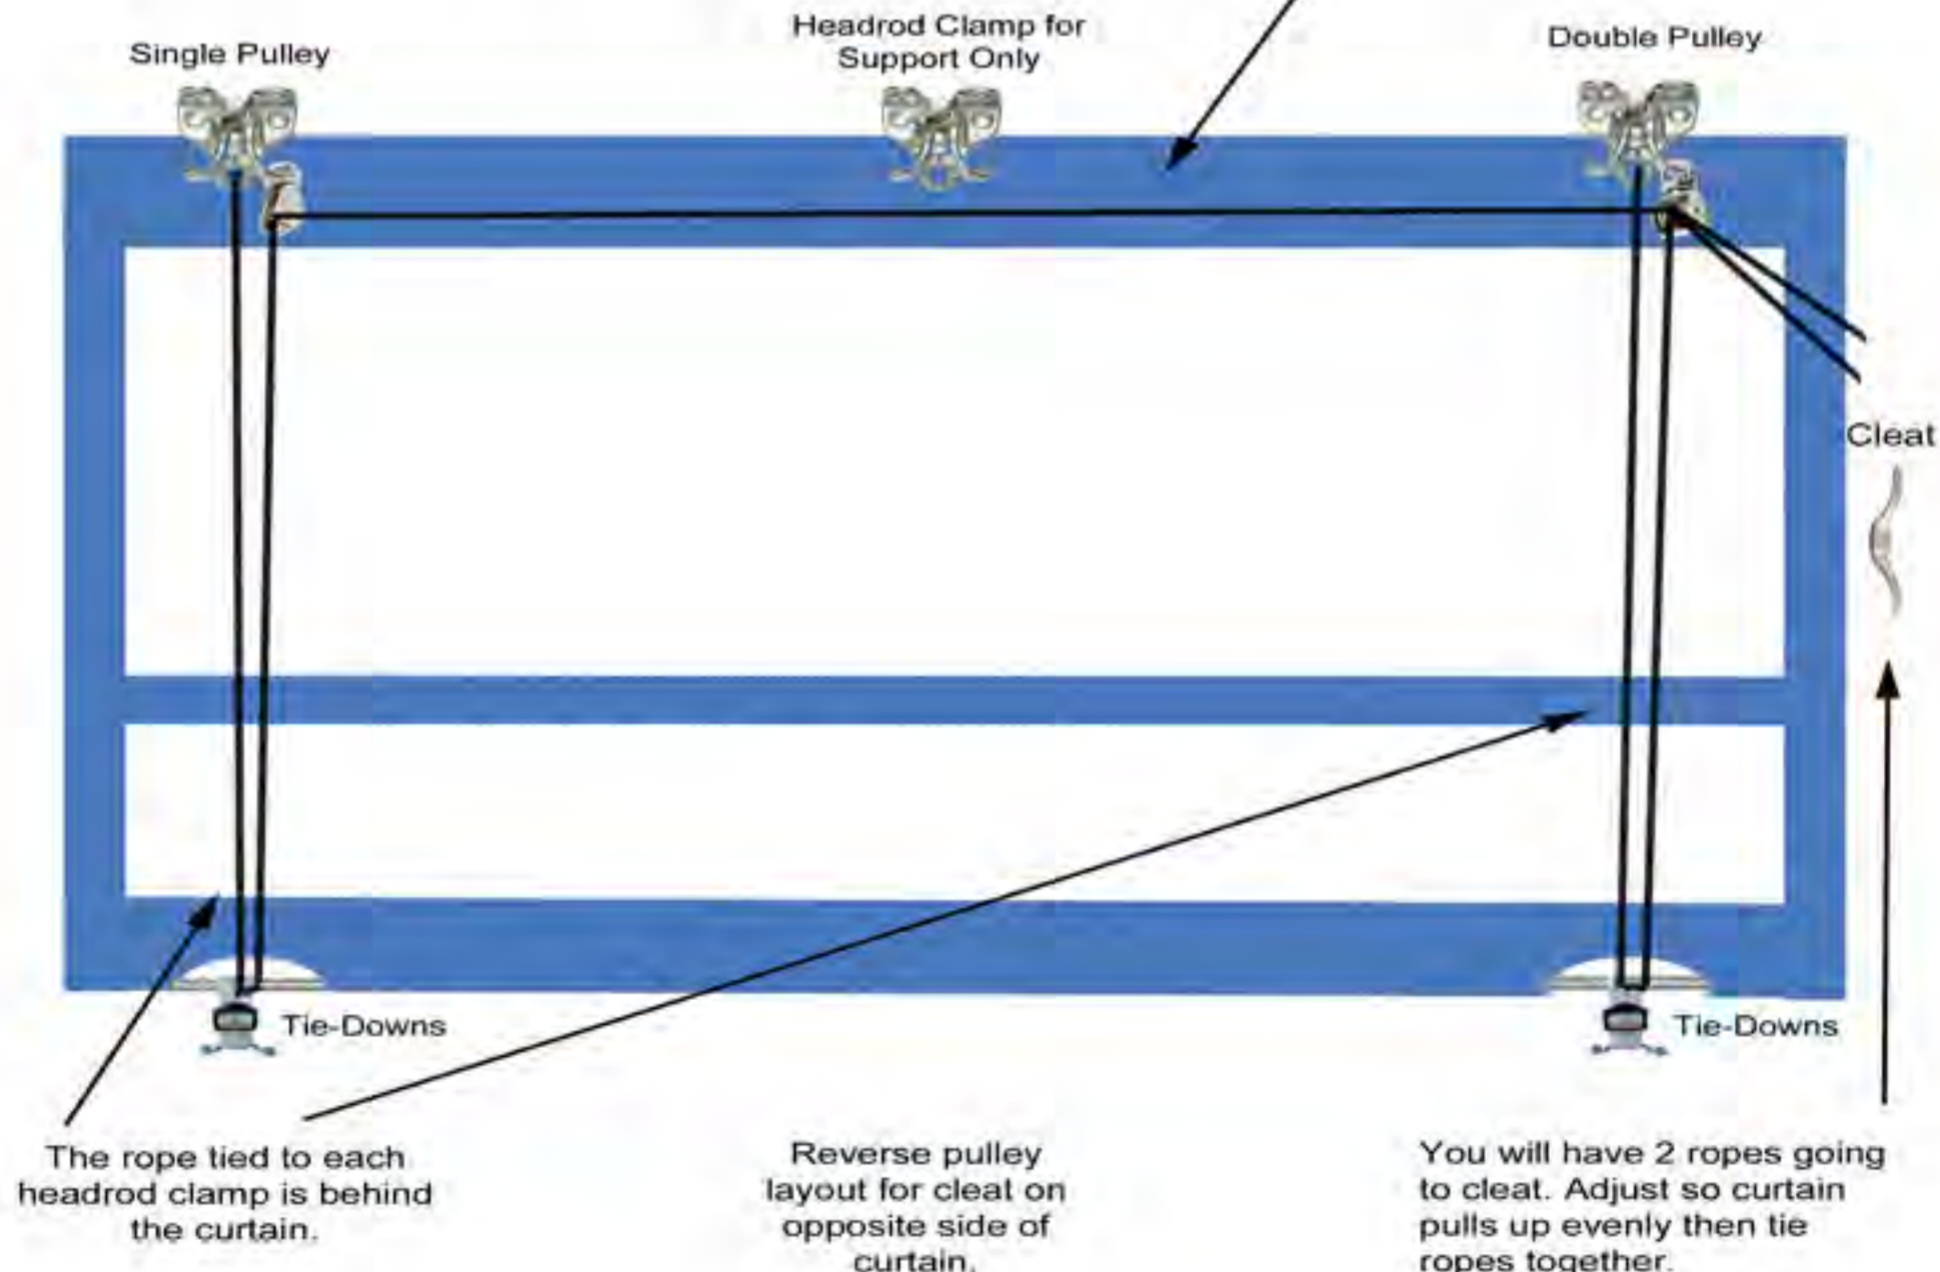

Installing Headrod Clamps:

1. Headrod clamps should be installed about 8" to 12" in from each side of the curtain at the desired height of the top of the curtain. The bottom of the roller curtain should not touch the floor when lowered.
2. Any headrod or pipe over 90" will be cut into two pieces for shipping purposes. Use the couplings provided to attach each piece of the headrod together, and the pipe.

Installing Headrod & Galvanized Pipe:

4. The fiberglass headrod goes through the smaller pocket (top of curtain), and the galvanized pipe goes through the larger pocket (bottom of curtain). \*Galvanized pipe can be slid in bottom pocket last to keep the weight off the curtain as you string the ropes.

5. With fiberglass headrod in pocket, clamp onto headrod clamps. Tighten wingnuts.

Installing Cleat:

6. Install cleat at desired position, on left or right side of Roller Curtain.




Porch Protection Curtains 9' - 11' 11" Wide

Stringing Diagram

Ropes tie to hole in headrod clamp, then drops behind curtain. Pull rope up in front of curtain under galvanized pipe, then put rope through pulley directly above. Then string rope through each pulley across the top, pull rope down to cleat, then cut rope. Repeat for each headrod clamp.

Ropes going through pulleys are in front of the curtain.

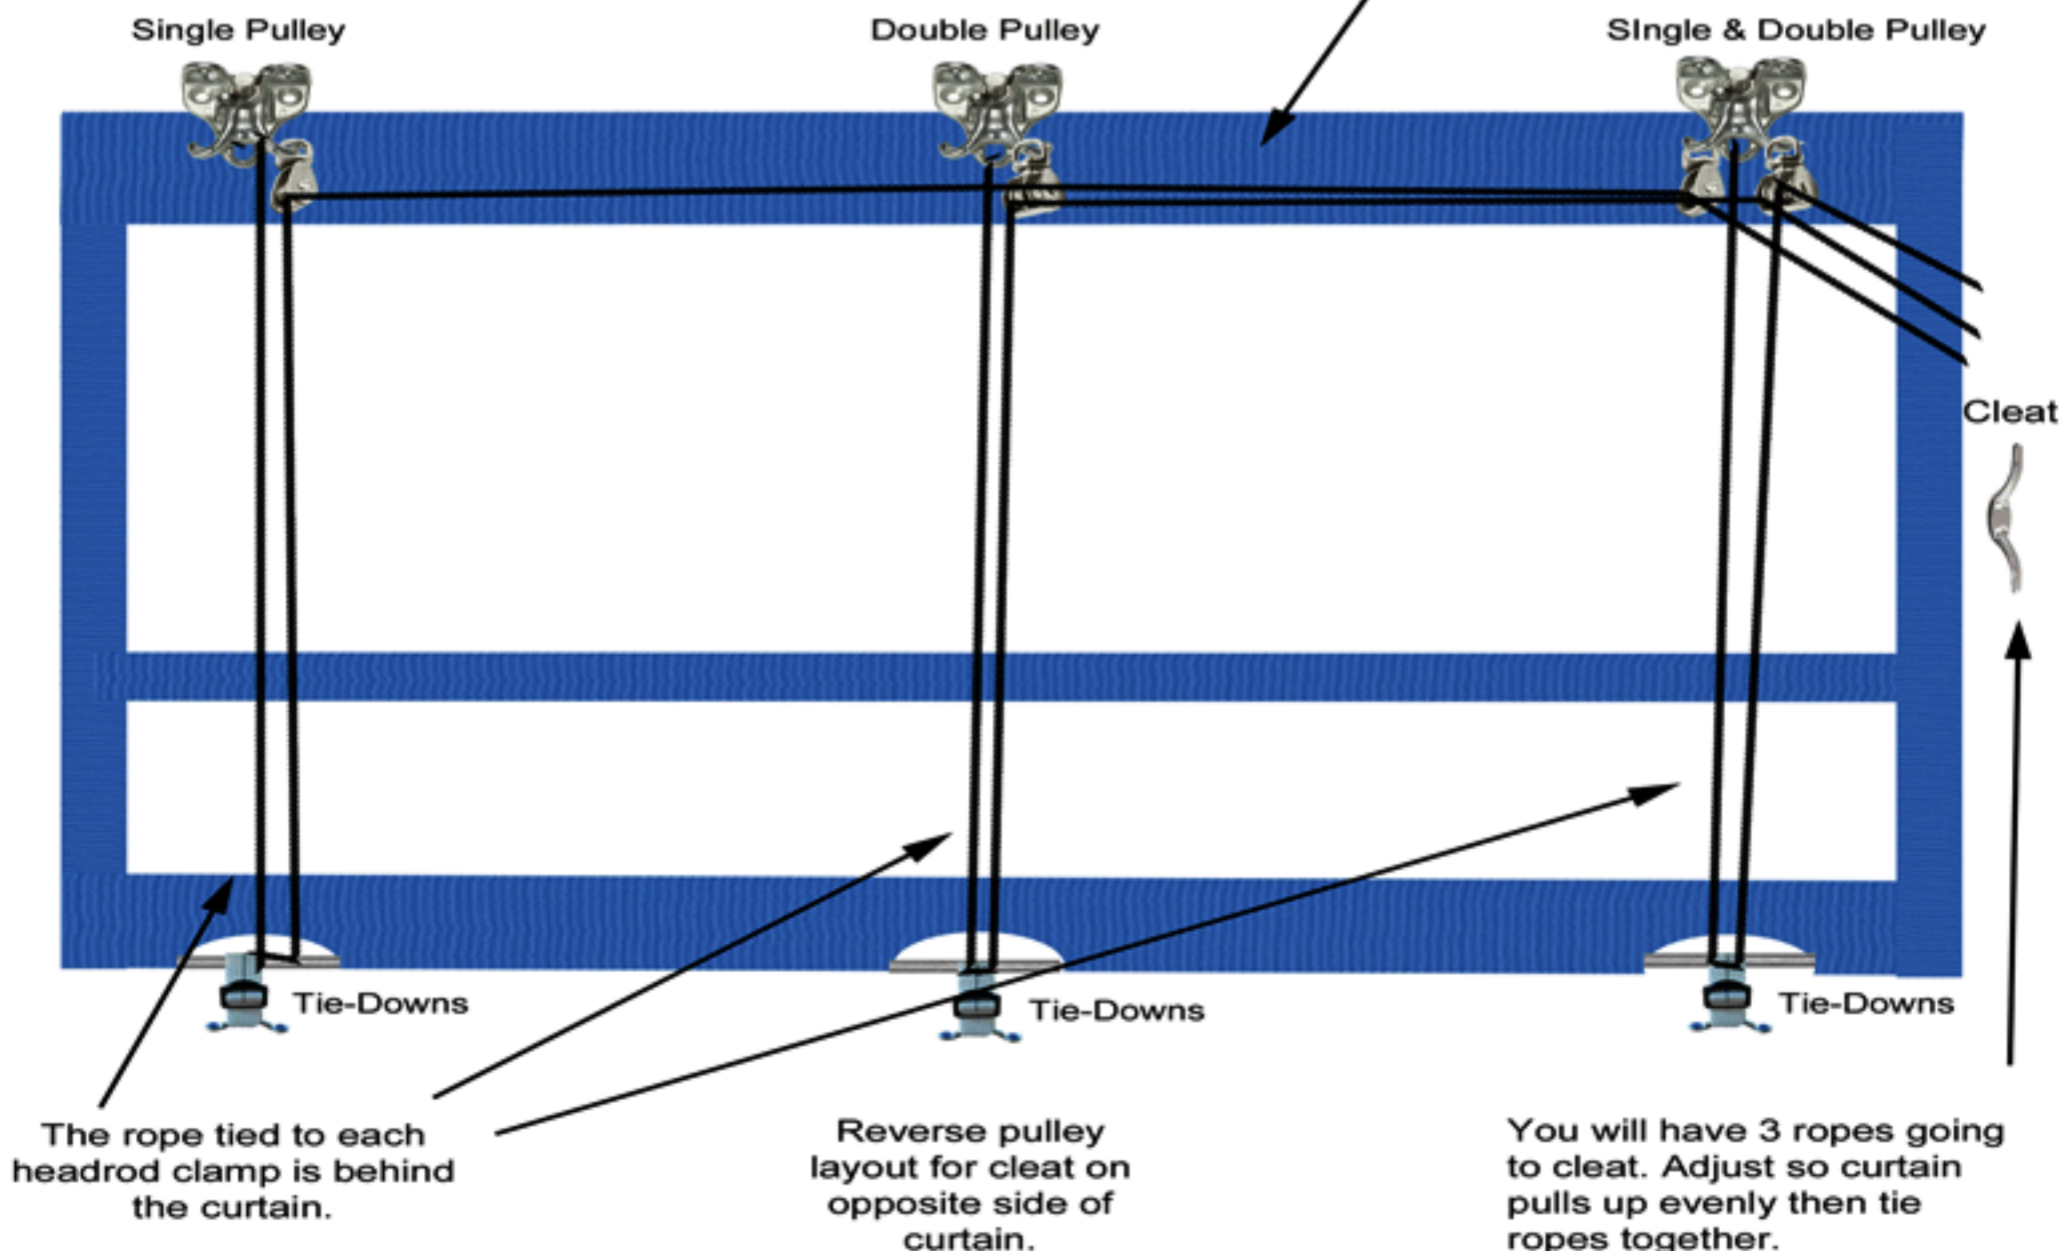

Installing Headrod Clamps:

1. Headrod clamps should be installed about 8" to 12" in from each side of the curtain at the desired height of the top of the curtain. The bottom of the roller curtain should not touch the floor when lowered.
2. Any headrod or pipe over 90" will be cut into two pieces for shipping purposes. Use the couplings provided to attach each piece of the headrod together, and the pipe.

Installing Headrod & Galvanized Pipe:

4. The fiberglass headrod goes through the smaller pocket (top of curtain), and the galvanized pipe goes through the larger pocket (bottom of curtain). \*Galvanized pipe can be slid in bottom pocket last to keep the weight off the curtain as you string the ropes.

5. With fiberglass headrod in pocket, clamp onto headrod clamps. Tighten wingnuts.

Installing Cleat:

6. Install cleat at desired position, on left or right side of Roller Curtain.



Porch Protection Curtains 12' - 18' Wide

Stringing Diagram

Ropes tie to hole in headrod clamp, then drops behind curtain. Pull rope up in front of curtain under galvanized pipe, then put rope through pulley directly above. Then string rope through each pulley across the top, pull rope down to cleat, then cut rope. Repeat for each headrod clamp.

Ropes going through pulleys are in front of the curtain.

