


# Door Awnings – Finding the Perfect Size

- A. Measure the width where you will mount the hinges on each side of the door trim or wall.
  - Awning must be 8" wider than door opening to allow the door to open outward.
  
- B. Locate the mounting point where you will mount the top of the awning.
  - Minimum mounting height above door opening for awnings 71" wide and under is **13 1/2"** to allow the door to open outward.
  - Minimum mounting height above door opening for awnings 72" wide and over is **16 1/2"** to allow for center frame supports and to allow the door to open outward.
  - From the top mounting point 12" down is where the arm of the awning will be located.
  - The 7" valance will hang below the frame.




- C. Door awnings are not retractable.
- D. Custom Widths up to 216".

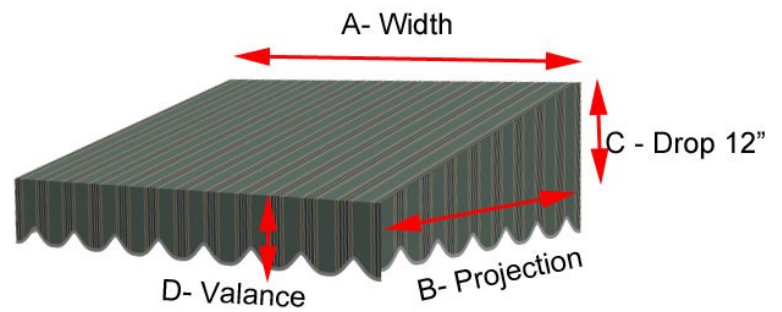


Height = Drop 12" + Valance 7" = 19" Total Height

## PYC Door Awning Frames


### 71" Wide & Under

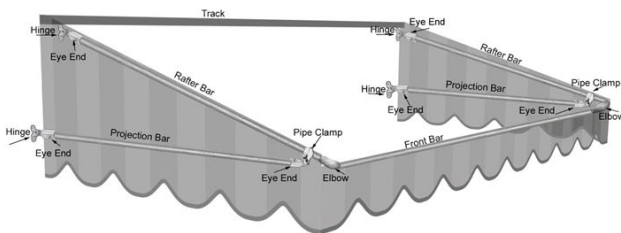

### 72" - 95" Wide

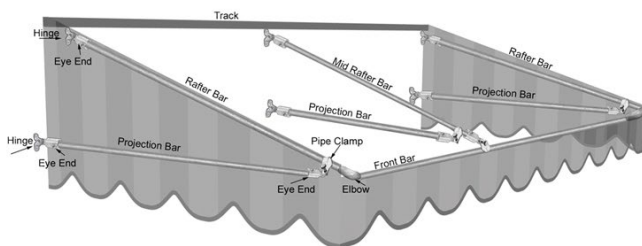

### 96" Wide & Over

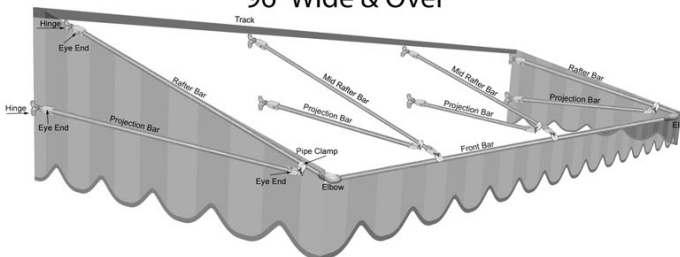

# PYC AWNINGS

EST



1987