



# Installation Instructions

PYC PORCH ROLLER CURTAINS | 12' - 18' WIDE | HEADROD CLAMP MOUNT

**See Videos on our Youtube Channel - PYC Awnings**

## **Installing Headrod Clamps:**

1. Install the two outer head rod clamps about 10" in from each side of the curtain at the same mounting point where you measured the top of the curtain. For example: if your curtain is 96" Height/Drop you should mount top of head rod clamp 96" up from floor. Install any additional clamps centered as shown on diagram below.
2. Any head rod or pipe over 90" will be cut into two pieces for shipping purposes. Use the couplings provided to attach each piece of the headrod together, and the pipe.
3. Tie ropes to headrod clamps before hanging curtain. - See Stringing Instructions Below

## **Installing Headrod & Galvanized Pipe:**

4. The fiberglass headrod goes through the smaller pocket (top of curtain), and the galvanized pipe goes through the larger pocket above the flap (bottom of curtain). \*Galvanized pipe can be slid in pocket after curtain is hung on headrod clamps (step 5) to keep the weight off the curtain
- \*The Galvanized pipe should be 2" off the floor when lowered. The flap can touch the floor.
5. With fiberglass headrod in pocket, clamp curtain onto headrod clamps leaving wingnuts slightly loose. Slip pulleys onto headrod clamp hooks as shown in diagram below. Tighten wingnuts.


## **Installing Cleat:**

6. Install cleat at desired position, on left or right side of Roller Curtain.

**Stringing Instructions:** Before hanging curtain, tie ropes onto headrod clamps and let rope drop to floor. Ropes will be labeled single pulley, double pulley etc. Hang curtain (step 5). Pull rope up in front of curtain under galvanized pipe through pulley directly above. String rope through each pulley across the top and pull down to the cleat. Repeat for each headrod clamp with pulley. When all ropes are strung, pull ropes together so they are taut and curtains roll up evenly. Tie ropes together and cut off any excess.

Ropes going through pulleys are in front of the curtain.

\* Tip- Tie knot close to pulley to keep center ropes from drooping.

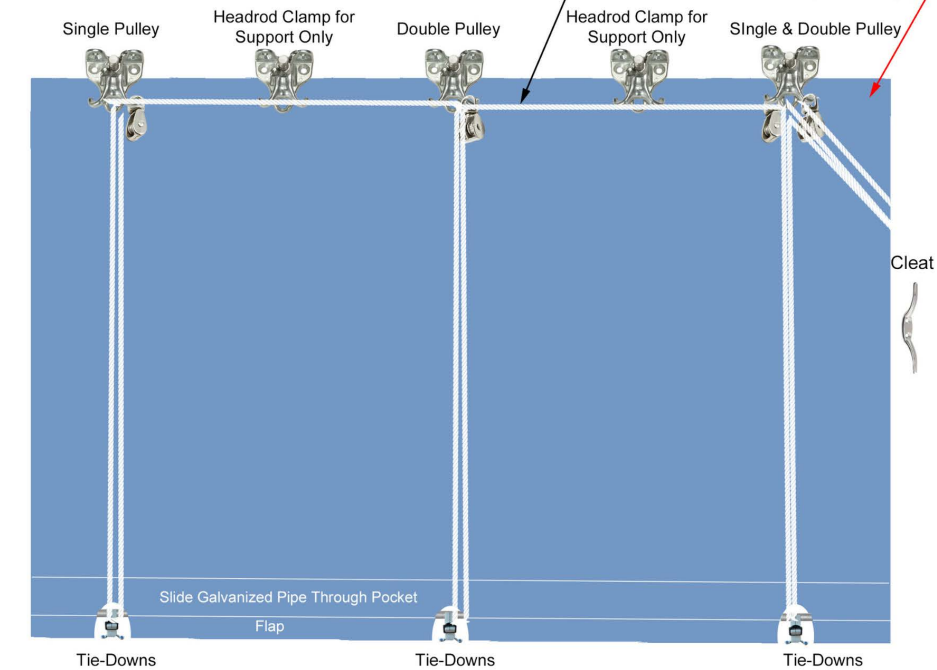

The rope tied to each headrod clamp is behind the curtain.

Reverse pulley layout for cleat on opposite side of curtain.

You will have 3 ropes going to cleat. Adjust so curtain pulls up evenly then tie ropes together.