



Porch Valance Installation Instructions

PYC PORCH VALANCE INSTALLATION INSTRUCTIONS | TRACK MOUNT

Porch Valance Installation Instructions - Track

Tools Needed

- 1/16" Drill Bit
- Phillips Screwdriver
- Tape Measure

1. Mark level line across for track placement.
2. **For track without flange** - Screw track onto ceiling using provided #4 flathead screws into the pre-drilled holes.
3. **For track with flange**- Drill pilot holes in flange of track. Start 1" from each end and measure evenly 12' -15" apart. Use 3/16" drill bit for pilot holes. Screw track onto wall using provided #8 panhead screws.
4. Slide one end of the beading insert sewn on the top of the valance into the track.




Track will be cut into sections for shipping - When installing butt ends of track together to make one length.

Installing Between Posts

Track with Flange - Cut off small section of track 12" or more. Install long part of track. Slide valance into track. Then slip on the remaining 12" of track into the top insert of the valance. Screw track onto the wall or ceiling.

Track without Flange - When installing track, leave gap 6" or more in center. Slide one side of valance in at a time.

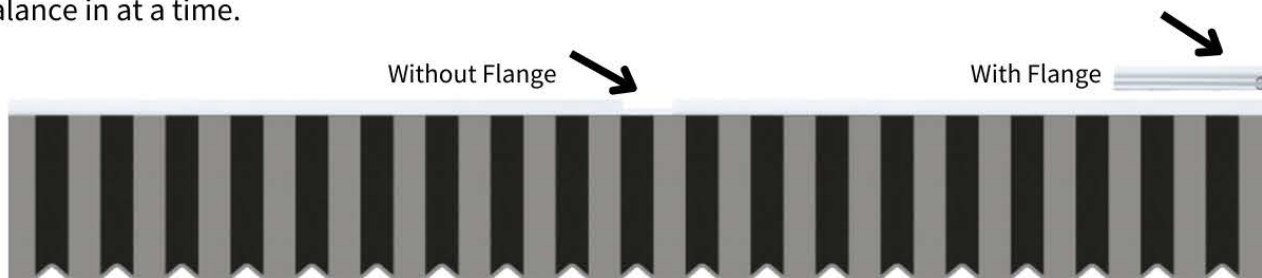

PYC Awnings